since 1969
PACIFIC GALVANIZING
HOT DIP GALVANIZING

galvanizing design check

Design Quick Reference

pipe column and poles

1 Check that EACH SECTION of pipe is properly vented at top and bottom

Each section of pipe **needs to be vented** at both top and bottom to allow zinc and air to easily flow through.

2 Check that base plate openings are correct for the project

For tubes **over 10 feet in length**, using at least two holes diagonally opposite each other is the best baseplate design.

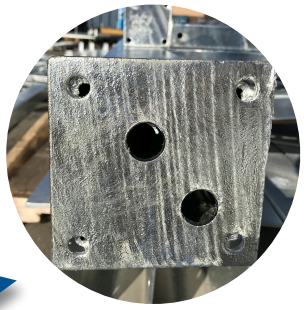

BEST design for 10 feet and **over**

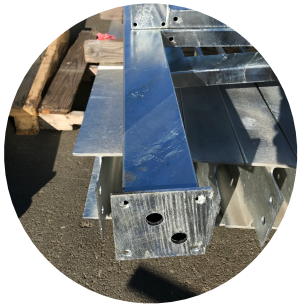
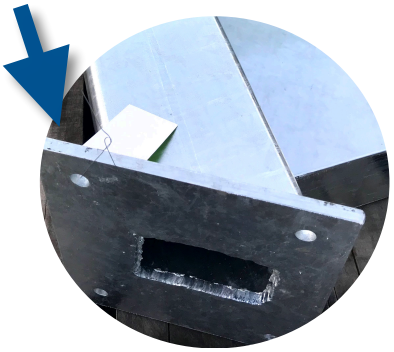
Ok design for tubes **under 10 feet**